

How to make a Matrox Meteor work on a Nomadics robot

You have to change configuration things in two places:

- 1) Go to `rc.robot` in `/etc/rc.d`. In `rc.robot`, make sure the meteor driver is being loaded.
- 2) Go to `lilo.config` in `/etc`. Make sure that a memory patch (for the meteor to use) is defined. Then you have to run “`lilo`” again after you make these changes so that it compiles in the changes you made to the `lilo.config` file.