Instruction Set Comparisons
CS 740

Sept. 22, 1997

Topics

- **Code Examples**
  - Procedure Linkage
  - Sparse Matrix Code
- **Instruction Sets**
  - MIPS
  - PowerPC
  - VAX

Procedure Examples

Procedure linkage

- Passing of control and data
- stack management

Control

- Register tests
- Condition codes
- loop counters

Code Example

```
int rfact(int n)
{
  if (n <= 1)
    return 1;
  return n*rfact(n-1);
}
```

MIPS rfact

Registers

- **$4 Argument n**
- **$16 Saved n**
  - Callee save

Stack Frame

- **24 bytes**
- **return PC**
- **$16**

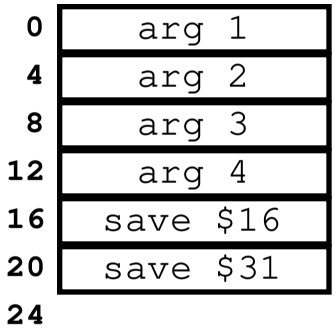


```
rfact:
 subu    $sp,$sp,24   # Allocate stack frame
 sw      $31,20($sp)  # Store return PC
 sw      $16,16($sp)  # Store $16
 move    $16,$4       # $16 <- n
 slt     $2,$16,2     # $2 <- n < 2
 BNE     $2,$0,$L3    # if < goto $L3
 li      $2,1         # with return value 1
 JAL     rfact        # Call recursively
 subu    $4,$16,1     # with argument n-1
 mult    $16,$2
 mflo    $2           # compute return value
$L3:
 lw      $31,20($sp)  # Restore return PC
 lw      $16,16($sp)  # Restore $16
 addu    $sp,$sp,24   # Remove stack frame
 j       $31          # return
```

VAX

Pinnacle of CISC

- **Maximize instruction density**
- **Provide instructions closely matched to typical program operations**

Instruction format

- **OP, arg1, arg2, …**
  - Each argument has arbitrary specifier
  - Accessing operands may have side effects

Condition Codes

- **Set by arithmetic and comparison instructions**
- **Basis for successive branches**

Procedure Linkage

- **Direct implementation of stack discipline**

VAX Registers

- **R0–R11 General purpose**
  - R2–R7 Callee save in example code
  - Use pair to hold double
- **R12 AP Argument pointer**
  - Stack region holding procedure arguments
- **R13 FP Frame pointer**
  - Base of current stack frame
- **R14 SP Stack pointer**
  - Top of stack
- **R15 PC Program counter**
  - Used to access data in code
- **N C V Z Condition codes**
  - Information about last operation result
  - Negative, Carry, 2's OVF, Zero

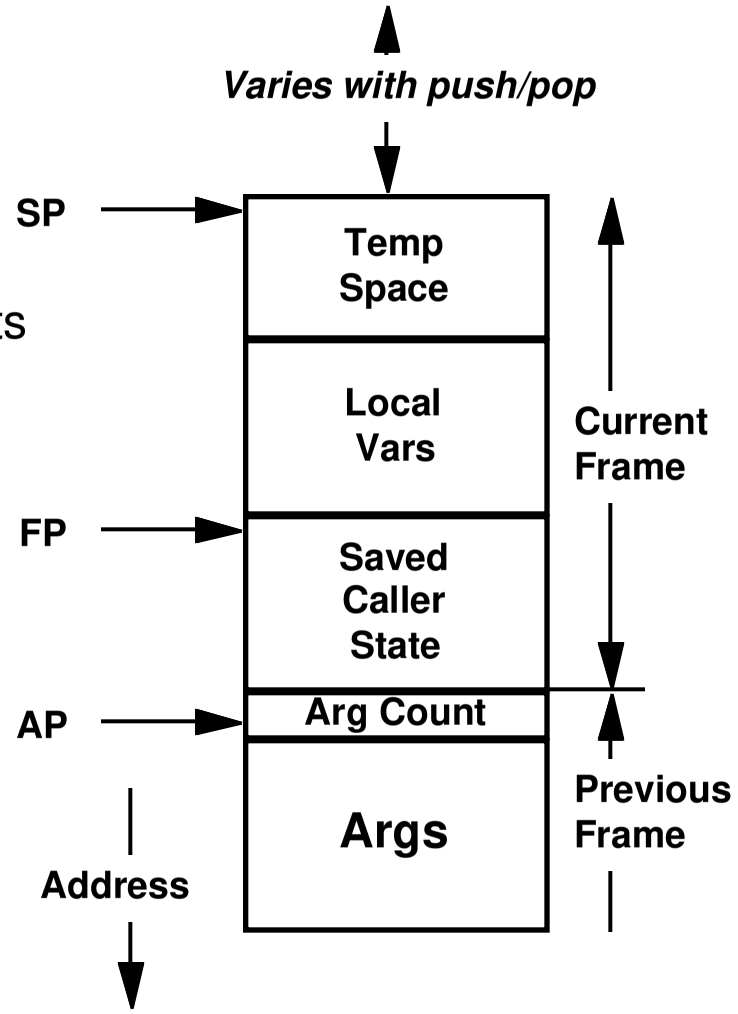

VAX Operand Specifiers

Forms

Notation	Value	Side Eff	Use
Ri	**ri**		**General purpose register**
$v	**v**		**Immediate data**
(Ri)	**M[ri]**		**Memory reference**
v(Ri)	**M[ri+v]**		**Mem. ref. with displacement**
***A*[Ri]**	**M[a+ri*d]**		**Array indexing**
– *A* is specifier denoting address a			
– d is size of datum			
(Ri)+	**M[ri]**	**Ri += d**	**Stepping pointer forward**
-(Ri)	**M[ri-d]**	**Ri –= d**	**Stepping pointer back**

Examples

- **Push *src*** **move *src*, –(SP)**
- **Pop *dest*** **move (SP)+, *dest***

VAX Procedure Linkage

Caller

- **Push Arguments**
  - Relative to SP
- **Execute CALLS narg, proc**
  - narg denotes number of argument words
  - proc starts with mask denoting registers to be saved on stack

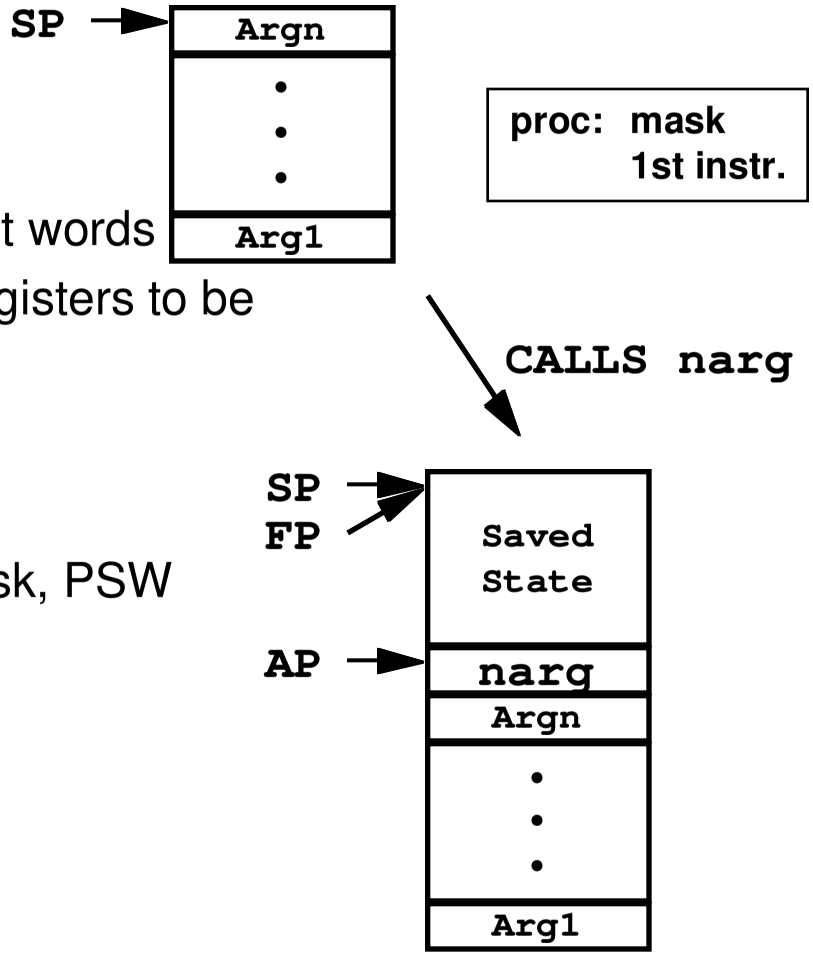

CALLS Instruction

- **Creates stack frame**
  - Saved registers, PC, FP, AP, mask, PSW
- **Sets AP, FP, SP**

Callee

- **Compute return value in R0**
- **Execute ret**
  - Undoes effect of CALLS

VAX rfact

Registers

- r6 saved n
- r0 return value

Stack Frame

- save r6

Note

- Destination argument last

```
_rfact:
        .word 0x40        # Save register r6
        movl 4(ap),r6     # r6 <- n
        cmpl r6,$1        # if n > 1
        jgtr L1           # then goto L1
        movl $1,r0        # r0 <- 1
        ret               # return
L1:
        pushab -1(r6)     # push n-1
        calls $1,_rfact   # call recursively
        mull2 r6,r0       # return result * n
        ret
```

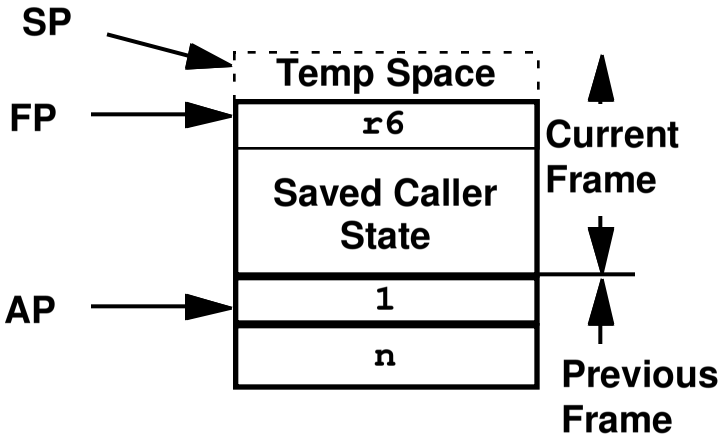

Sparse Matrix Code

Task

- **Multiply sparse matrix times dense vector**
  - Matrix has many zero entries
  - Save space and time by keeping only nonzero entries
  - Common application

Compressed Sparse Row Representation

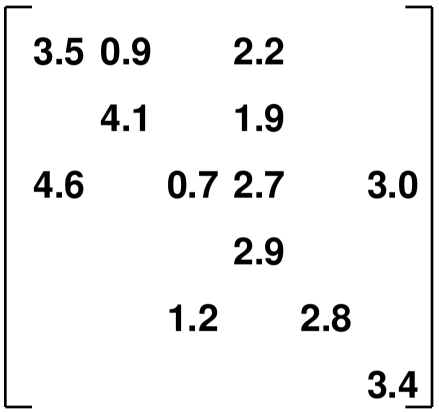


```
[(0,3.5) (1,0.9) (3,2.2)]
[(1,4.1) (3,1.9)]
[(0,4.6) (2,0.7) (3,2.7) (5,3.0)]
[(2,2.9)]
[(2,1.2) (4,2.8)]
[(5,3.4)]
```

CSR Encoding

Parameters

- **nrow** Number of rows (and columns)
- **nentries** Number of nonzero matrix entries

Val

- List of nonzero values (nentries)

Cindex

- List of column indices (nentries)

Rstart

- List of starting positions for each row (nrow+1)

```
typedef struct {
  int nrow;
  int nentries;
  double *val;
  int *cindex;
  int *rstart;
} csr_rec, *csr_ptr;
```

CSR Example

Parameters

- nrow = 6
- nentries = 13

Val

```
[3.5, 0.9, 2.2, 4.1, 1.9, 4.6, 0.7, 2.7, 3.0, 2.9, 1.2, 2.8, 3.4]
```

Cindex

```
[0,   1,   3,   1,   3,   0,   2,   3,   5,   2,   2,   4,   5]
```

Rstart

```
[0, 3, 5, 9, 10, 12, 13]
```

```
[(0,3.5) (1,0.9) (3,2.2)]
[(1,4.1) (3,1.9)]
[(0,4.6) (2,0.7) (3,2.7) (5,3.0)]
[(2,2.9)]
[(2,1.2) (4,2.8)]
[(5,3.4)]
```

CSR Multiply: Clean Version

```
void csr_mult_smpl(csr_ptr M, double *x, double *z)
{
  int r, ci;
  for (r = 0; r < M->nrow; r++) {
    z[r] = 0.0;
    for (ci = M->rstart[r]; ci < M->rstart[r+1]; ci++)
      z[r] += M->val[ci] * x[M->cindex[ci]];
  }
}
```

Innermost Operation

- z[r] += M[r,c] * x[c]
- Column c given by `cindex[ci]`
- Matrix element M[r,c] by `val[ci]`

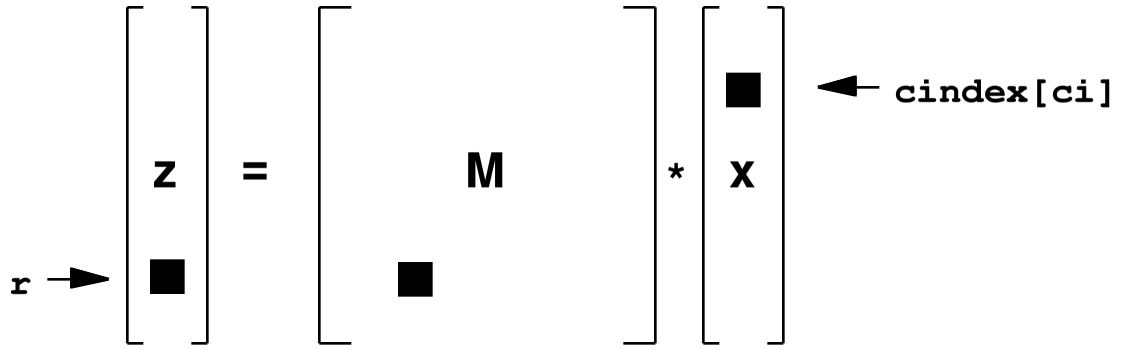

CSR Multiply: Fast Version

```
void csr_mult_opt(csr_ptr M, ftype_t *x, ftype_t *z)
{
  ftype_t *val = M->val;
  int *cindex_start = M->cindex;
  int *cindex = M->cindex;
  int *rnstart = M->rstart+1;
  ftype_t *z_end = z+M->nrow;

  while (z < z_end) {
    ftype_t temp = 0.0;
    int *cindex_end = cindex_start + *(rnstart++);
    while (cindex < cindex_end)
      temp += *(val++) * x[*cindex++];
    *z++ = temp;
  }
}
```

Performance

- **Approx 2X faster**
- **Avoids repeated memory references**

Optimized Inner Loop

```
while (...)
  temp += *(valp++) * x[*cip++];
```

Inner Loop Pointers

`cip` steps through cindex

`valp` steps through Val

Multiply next matrix value by vector element and add to sum

VAX Inner Loop

Registers

- r4 cip
- r2,r3 temp
- r5 valp
- r6 cip_end
- r10 x

```
while (...)
  temp += *(valp++) * x[*cip++];
```

Observe

- muld3 instruction does 1/2 of the work!

```
L36:
        movl (r4)+,r0    # r0 <- *cip++
        muld3 (r5)+,(r10)[r0],r0 # r0,r1 <- *valp++ * x[r0]
        addd2 r0,r2      # temp += r0,r1
        cmpl r4,r6       # if not done
        jlssu L36        # then goto L36
```

Power / PowerPC

History

- **IBM develops Power architecture**
  - Basis of RS6000
  - Somewhere between RISC & CISC
- **IBM / Motorola / Apple combine to develop PowerPC architecture**
  - Derivative of Power
  - Used in Power Macintosh

CISC-like features

- **Registers with control information**
  - Set of condition registers (CR0–7) holding outcome of comparisons
  - link register (LR) to hold return PC
  - count register (CTR) to hold loop count
- **Updating load / stores**
  - Update base register with effective address

PowerPC Curiosities

Loop Counter

`mtspr CTR r3`

» CTR <-- r3

`bc CTR=0, loop`

» CTR—

» If (CTR == 0) goto loop

Updating Load/Store

`lu r3, 4(r11)`

» EA <-- r11 + 4

» r3 <-- M[EA]

» r11<-- EA

Multiply/Accumulate

`fma fp3,fp1,fp0,fp3`

» fp3 <-- fp1*fp0 + fp3

PowerPC Structure

System Partitioning

- **Branch Unit**
  - Fetch instructions
  - Make control decisions
- **Integer Unit**
  - Integer & address computations
- **Floating Point Unit**
  - Floating Pt. computations

Register State

- **Partitioned like system**
- **Allows units to operate autonomously**

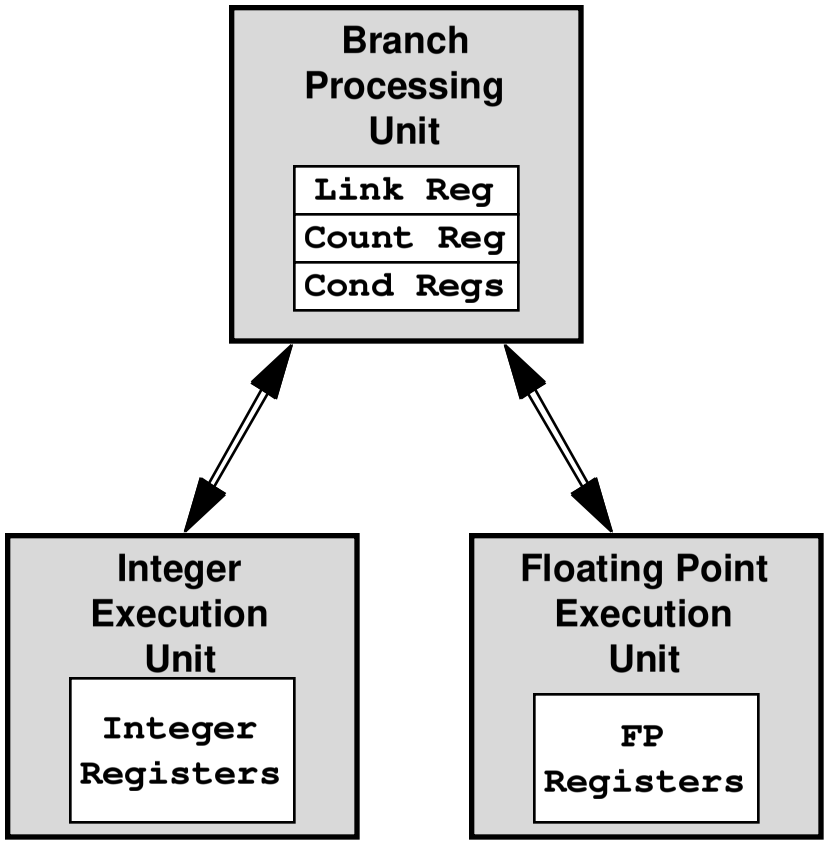

PPC Inner Loop

Registers

- r3 *cip
- r4 x
- r10 valp-8
- r11 cip
- fp3 temp
- CNT # iterations

```
    while (...)
      temp += *(valp++) * x[*cip++];
```

```
__L208:
  rlinm   r3,r3,3,0,28     # *cip * 8
  lfdx    fp0,r4,r3        # fp0 <- x[*cip]
  lfdu    fp1,8(r10)       # fp1 <- *(++valp)
  lu      r3,4(r11)        # r3  <- *++cip
  fma     fp3,fp1,fp0,fp3  # fp3 += fp1*fp0
  # Decrement & loop
  bc      BO_dCTR_NZERO,CR0_LT,__L208
```

Observations

- **Makes good use of PPC features**
  - Multiply-Add
  - Updating loads
  - Loop counter
- **Requires sophisticated compiler**

Performance Comparison

Experiment

- 10 X 10 matrices
- 100% density
- 100 multiply accumulates

Machine	MHz	μsecs	Cycles/Ele	
MIPS	25	365	18	
PPC 601	62	63	8	
PPC 603	75	125	19	(Weak Compiler)
VAX	25?	2448	122?	
Pentium	90	79	11	
SGI/CC	180	37	13.5	

Summary

MIPS

- **Simple register state**
- **Every operation has single effect**
  - Load, store, operate, branch

VAX

- **Hidden control state**
- **Operations vary from simple to complex**
- **Side effects possible**

Power PC

- **Complex control state**
- **Operations simple to medium**
- **Side effects possible**
- **Hard target for code generator**